



IR Code

"1" bit: 38KHZ carrier wave	1266us,	low level: 422us
"0" bit: 38KHZ carrier wave	422us,	low level: 1266us

UP: 1101 00001000

STOP: 1101 00010000

DOWN: 1101 00100000

IR HEX Codes – manual setting

Up : Protocol=F12 Device=3.1 OBC=4 (From signal)

0000 006D 000C 0000 0030 0010 0030 0010 0010 0030 0030 0010 0010 0030 0010 0030 0030 0010 0010 0030 0010 0030 0010 0030 0010 0030 0010 02FC

Stop : Protocol= (From signal)

0000 006C 0000 000C 0030 0010 0030 0010 0010 0030 0030 0010 0010 0030 0010 0030 0010 0030 0030 0010 0010 0030 0010 0030 0010 0030 0010 0303

Down : Protocol= (From signal)

0000 006C 0000 000C 0030 0010 0030 0010 0010 0030 0030 0010 0010 0030 0010 0030 0010 0030 0030 0010 0010 0030 0010 0030 0010 0030 0010 0302



RS232 Central Control Wiring and Setting Information

RS232 setting :

1 Baud rate: 2400

2 data: 8 codes

4 start: 1

5 stop: 1

For up: FF 10 11 00 DD

For down: FF 10 11 00 EE

For stop: FF 10 11 00 CC

