



AVT-CIRKitV1&V2 and AVT-CRFKitV1&V2 Wiring Instructions (110V or 220V)

The infrared remote control kit (AVT-CIRKitV1&V2) consists of an IR receiver and transmitter (shown).

The radio frequency remote control kit (AVT-CRFKitV1&V2) consists of an RF receiver and transmitter (shown).

To connect to the input terminals, the wires should be stripped of no more than a 1/4-inch-long for insertion.

Insert the motor and power wires into marked input terminals as shown. Secure the wires by tightening the screw in the terminal. Do not over tighten. The wires are secure if a gentle pull on the wire does not remove it from the terminal.

