



INSTRUCTIONS

Unplug the screen's AC power cord.

If the screen's AC power cord is plugged into an outlet that contains an on/off switch, then turn the switch to the off position.



Press the “**Λ**” (up) button on the RF remote control. The remote control's LED light will start flashing.

Keep the “**Λ**” (up) button pressed until the LED light stops flashing.

Plug the screen's AC power cord to an outlet.

If the screen's AC power cord is plugged to an outlet that contains an on/off switch, then turn the switch to the on position.



When the motor beeps three times, release the “**Λ**” (up) button.

Press and hold again the “**Λ**” (up) button until the motor beeps two times, then release the “**Λ**” (up) button.

The RF remote control and the motor are now synchronized.