




INSTRUCTIONS

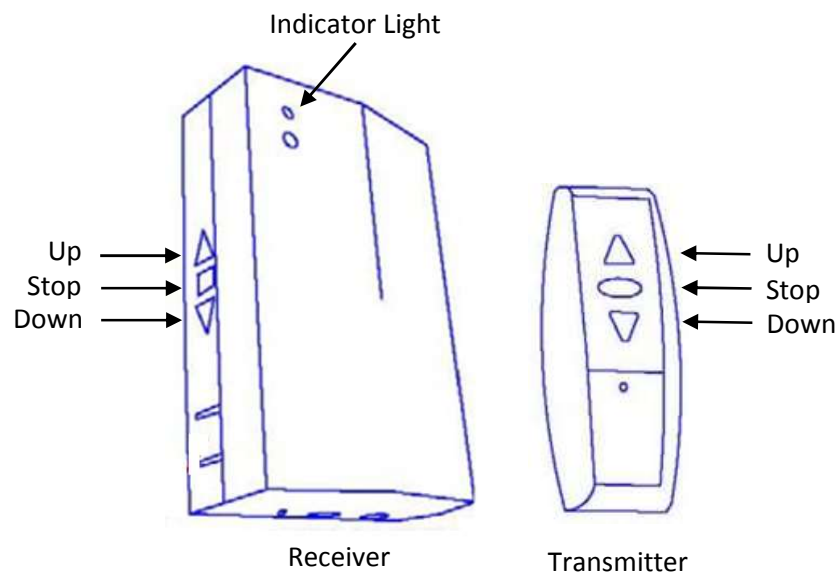

1. Press simultaneously the “up” and the “stop” buttons on the RF receiver.
2. Release the “up” and the “stop” buttons when the receiver indicator light starts flashing.
3. Immediately, press the “up” button on the RF transmitter until there is a tick sound, then release the “up” button.
4. The RF transmitter and the RF receiver are now synchronized.